
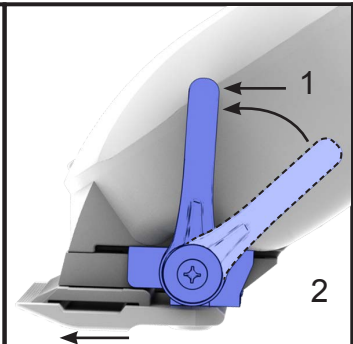
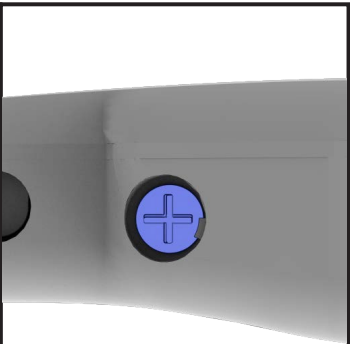


MAINS CLIPPER POWER SCREW ADJUSTMENT

If your clipper is too loud



POWERSCREW

 <p>The power screw is located on the side of the clipper. Make sure the blades are attached and oiled. You will need to plug your clipper in and turn it on.</p>	 <p>If the clipper has a taper lever, put it in the upmost position (1).</p>	 <p>Turn the power screw in a clockwise direction until you hear a loud noise, then, slowly turn the power screw out (counter clockwise) until the noise stops, then about half a turn more. This is maximum power.</p>
--	---	---

It is important to realign your blades after adjusting your power screw. [Please see blade replacement and alignment].